

The JB-111N BUS signal PG output module

The JB-111N is a component of the **JABLOTRON** system. It provides an output relay switch. It can be used for switching on/off the lights, ventilators, etc. The relay can be controlled with a programmable control panel (PG) output or according to the status of a section (set = relay on) or when there is an alarm in a chosen section (alarm = relay on). The device should be installed by a trained technician with a valid certificate issued by an authorized distributor.

Installation

The module can be installed into the JA-19xPL mounting box (by Jablotron) or into the control panel box. In order to comply with the security grade 2 classification, the module must be installed into the JA-194PL or JA-195PL mounting box together with the JA-111H TRB module.

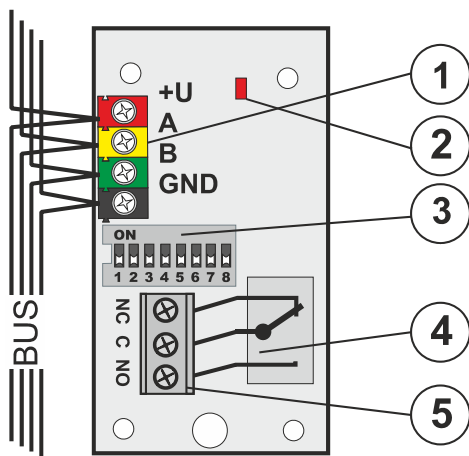


Figure: 1 – BUS terminals; 2 – red relay switching indicator; 3 – configuration switch; 4 – output relay; 5 – relay terminals

1. Use the switch (3) to set the required number of the PG output or the number of the section to which the relay should react (see tables).
2. Connect BUS wires to the terminals (1).

When connecting the module to the system BUS, always switch the power off.



If the module is installed outside the protected area, the JA-110T BUS insulator should be used for the external section of the wiring.

The output contact does not contain an overload protection.

3. Switch on the system and test its functioning
4. Check the supply voltage at the BUS terminals (red, black) when the relay is activated. The voltage must be at least 9V.
5. Connect the controlled device to the relay output terminals (5).

Notes:

- The module does not occupy any position in the control panel (it is not enrolled into the system).
- If you enroll multiple modules with identical settings to the system, they will have the same reaction.
- The number of modules is only limited by the power consumption from the BUS.
- The setting of individual programmable outputs is done in the **PG outputs** window in the F-Link software. A detailed description of the setting is available in the control panel installation manual.
- If the output reacts to a setting of a section, it is triggered when the selected section is fully set.
- If the output reacts to an alarm, it is triggered when there is external or internal warning (EW or IW).

ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	1	1 2 3 4 5 6 7 8	9	1 2 3 4 5 6 7 8	17	1 2 3 4 5 6 7 8	25
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	2	1 2 3 4 5 6 7 8	10	1 2 3 4 5 6 7 8	18	1 2 3 4 5 6 7 8	26
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	3	1 2 3 4 5 6 7 8	11	1 2 3 4 5 6 7 8	19	1 2 3 4 5 6 7 8	27
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	4	1 2 3 4 5 6 7 8	12	1 2 3 4 5 6 7 8	20	1 2 3 4 5 6 7 8	28
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	5	1 2 3 4 5 6 7 8	13	1 2 3 4 5 6 7 8	21	1 2 3 4 5 6 7 8	29
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	6	1 2 3 4 5 6 7 8	14	1 2 3 4 5 6 7 8	22	1 2 3 4 5 6 7 8	30
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	7	1 2 3 4 5 6 7 8	15	1 2 3 4 5 6 7 8	23	1 2 3 4 5 6 7 8	31
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	8	1 2 3 4 5 6 7 8	16	1 2 3 4 5 6 7 8	24	1 2 3 4 5 6 7 8	32
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	33	1 2 3 4 5 6 7 8	41	1 2 3 4 5 6 7 8	49	1 2 3 4 5 6 7 8	57
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	34	1 2 3 4 5 6 7 8	42	1 2 3 4 5 6 7 8	50	1 2 3 4 5 6 7 8	58
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	35	1 2 3 4 5 6 7 8	43	1 2 3 4 5 6 7 8	51	1 2 3 4 5 6 7 8	59
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	36	1 2 3 4 5 6 7 8	44	1 2 3 4 5 6 7 8	52	1 2 3 4 5 6 7 8	60
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	37	1 2 3 4 5 6 7 8	45	1 2 3 4 5 6 7 8	53	1 2 3 4 5 6 7 8	61
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	38	1 2 3 4 5 6 7 8	46	1 2 3 4 5 6 7 8	54	1 2 3 4 5 6 7 8	62
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	39	1 2 3 4 5 6 7 8	47	1 2 3 4 5 6 7 8	55	1 2 3 4 5 6 7 8	63
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	40	1 2 3 4 5 6 7 8	48	1 2 3 4 5 6 7 8	56	1 2 3 4 5 6 7 8	64
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	65	1 2 3 4 5 6 7 8	73	1 2 3 4 5 6 7 8	81	1 2 3 4 5 6 7 8	89
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	66	1 2 3 4 5 6 7 8	74	1 2 3 4 5 6 7 8	82	1 2 3 4 5 6 7 8	90
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	67	1 2 3 4 5 6 7 8	75	1 2 3 4 5 6 7 8	83	1 2 3 4 5 6 7 8	91
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	68	1 2 3 4 5 6 7 8	76	1 2 3 4 5 6 7 8	84	1 2 3 4 5 6 7 8	92
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	69	1 2 3 4 5 6 7 8	77	1 2 3 4 5 6 7 8	85	1 2 3 4 5 6 7 8	93
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	70	1 2 3 4 5 6 7 8	78	1 2 3 4 5 6 7 8	86	1 2 3 4 5 6 7 8	94
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	71	1 2 3 4 5 6 7 8	79	1 2 3 4 5 6 7 8	87	1 2 3 4 5 6 7 8	95
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	72	1 2 3 4 5 6 7 8	80	1 2 3 4 5 6 7 8	88	1 2 3 4 5 6 7 8	96
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	97	1 2 3 4 5 6 7 8	105	1 2 3 4 5 6 7 8	113	1 2 3 4 5 6 7 8	121
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	98	1 2 3 4 5 6 7 8	106	1 2 3 4 5 6 7 8	114	1 2 3 4 5 6 7 8	122
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	99	1 2 3 4 5 6 7 8	107	1 2 3 4 5 6 7 8	115	1 2 3 4 5 6 7 8	123
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	100	1 2 3 4 5 6 7 8	108	1 2 3 4 5 6 7 8	116	1 2 3 4 5 6 7 8	124
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	101	1 2 3 4 5 6 7 8	109	1 2 3 4 5 6 7 8	117	1 2 3 4 5 6 7 8	125
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	102	1 2 3 4 5 6 7 8	110	1 2 3 4 5 6 7 8	118	1 2 3 4 5 6 7 8	126
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	103	1 2 3 4 5 6 7 8	111	1 2 3 4 5 6 7 8	119	1 2 3 4 5 6 7 8	127
ON	PG	ON	PG	ON	PG	ON	PG
1 2 3 4 5 6 7 8	104	1 2 3 4 5 6 7 8	112	1 2 3 4 5 6 7 8	120	1 2 3 4 5 6 7 8	128

Table 1: The output reacts to the PG output state.

The JB-111N BUS signal PG output module

ON 1 2 3 4 5 6 7 8 SC	ON 1 2 3 4 5 6 7 8 SC	ON 1 2 3 4 5 6 7 8 SC	ON 1 2 3 4 5 6 7 8 AL	ON 1 2 3 4 5 6 7 8 AL
1	9	1	1	9
ON 1 2 3 4 5 6 7 8 SC	ON 1 2 3 4 5 6 7 8 SC	ON 1 2 3 4 5 6 7 8 SC	ON 1 2 3 4 5 6 7 8 AL	ON 1 2 3 4 5 6 7 8 AL
2	10	2	2	10
ON 1 2 3 4 5 6 7 8 SC	ON 1 2 3 4 5 6 7 8 SC	ON 1 2 3 4 5 6 7 8 SC	ON 1 2 3 4 5 6 7 8 AL	ON 1 2 3 4 5 6 7 8 AL
3	11	3	3	11
ON 1 2 3 4 5 6 7 8 SC	ON 1 2 3 4 5 6 7 8 SC	ON 1 2 3 4 5 6 7 8 SC	ON 1 2 3 4 5 6 7 8 AL	ON 1 2 3 4 5 6 7 8 AL
4	12	4	4	12
ON 1 2 3 4 5 6 7 8 SC	ON 1 2 3 4 5 6 7 8 SC	ON 1 2 3 4 5 6 7 8 SC	ON 1 2 3 4 5 6 7 8 AL	ON 1 2 3 4 5 6 7 8 AL
5	13	5	5	13
ON 1 2 3 4 5 6 7 8 SC	ON 1 2 3 4 5 6 7 8 SC	ON 1 2 3 4 5 6 7 8 SC	ON 1 2 3 4 5 6 7 8 AL	ON 1 2 3 4 5 6 7 8 AL
6	14	6	6	14
ON 1 2 3 4 5 6 7 8 SC	ON 1 2 3 4 5 6 7 8 SC	ON 1 2 3 4 5 6 7 8 SC	ON 1 2 3 4 5 6 7 8 AL	ON 1 2 3 4 5 6 7 8 AL
7	15	7	7	15
ON 1 2 3 4 5 6 7 8 SC	ON 1 2 3 4 5 6 7 8 SC	ON 1 2 3 4 5 6 7 8 SC	ON 1 2 3 4 5 6 7 8 AL	ON 1 2 3 4 5 6 7 8 AL
8	SECTION: SET	8	SECTION: ALARM	8

Table 2: The output reacts to setting the chosen section

Table 3: The relay reacts to an alarm in the chosen section

Technical specifications

Power	from control panel BUS 12 V DC (9 ...15 V)
Current consumption (relay off/on)	5 mA/25 mA
Current consumption for cable selection	25 mA
Relay contact rating:	
Maximum switched voltage	50 V AC/24 V DC
Maximum switched current	2 A
Minimum switched current	10 mA
Dimensions	78 x 40 x 15 mm
Weight	23 g
Classification	Security grade 2/Environmental class II (according to EN 50131-1)
	Only when installed into the JA-194PL or JA-195PL mounting box together with the JA-111H TRB module!
Operational environment	indoor general
Operational temperature range	-10 °C to +40 °C
Average operational humidity	75% RH, non-condensing
Certification body	Trezor Test s.r.o. (no. 3025)
Complies with	EN 50131-1 ed. 2+A1+A2, EN 50131-3, EN 50130-4 ed. 2+A1, EN 55032, EN 50581



JABLOTRON ALARMS a.s. hereby declares that the JB-111N is in a compliance with the relevant Union harmonisation legislation: Directives No: 2014/30/EU, 2011/65/EU, when used as intended. The original of the conformity assessment can be found at www.jablotron.com – Section Downloads.

Note: Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please return the product to the dealer or contact your local authority for further details of your nearest designated collection point.