

The outdoor access module is a component of the JABLOTRON system. The RFID card reader can be used for the activation of a PG output by which you can control access to an area by, for example, an electric lock. module only has a reading part and optical status indication. The device should be installed by a trained technician with a valid certificate issued by an authorised distributor.

Installation

- Release the screw which holds the plastic cover (6).
- Install the plastic base onto the prepared place where the tamper spring can be properly switched (5).
- Push the cable of the module through the plastic base.
- Connect the bus cable to the bus terminals via a JA-110Z-A (B, C) terminal module and a JA-190PL installation box.

Setting the properties

Go to the Devices window in the F-Link software. When you are at the module (reader) position, use the Internal settings option.

Entrance beep signalling: Audible signalling of the entrance delay time of the section to which the JA-122E has been assigned. The option is available if only the authorisation action is checked in F-Link.

Authorisation action: If the section to which the access module has been assigned is set, authorisation by reading an RFID card triggers the entrance delay time and activates the PGxx checked by the PG control option in F-Link.

PG control: Choose which PG will be controlled by authorisation only. The chosen PGs need to have their reactions set to Pulse or Change (see PG output settings). On one JA-122E access module it is possible to control several PGs at the same time by authorisation. Each PG output is only able to be controlled by 2 access modules (RFID readers/keypads), (settings are linked to PG outputs/activation/activation of PG output by authorisation on a keypad).

Module optical indication:


Indicates the status of the section to which the JA-122E has been assigned. The red LED indicates an armed (set) section, the green LED indicates a disarmed (unset) section.

Indication disabled: Optical indication is completely disabled.

Indication goes off: Optical indication shows the system status for 180 sec then it goes off. The system status is shown by RFID reader activation or a change in system status.

Permanent indication: The system status is indicated permanently.

Technical specifications

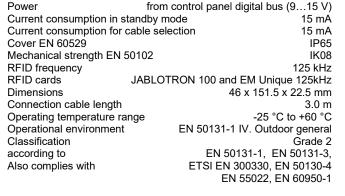



Proceed with enrollment according to the control panel installation manual. Basic procedure:

always switch the power off.

When connecting the module to the bus,

- When the device is powered, the yellow LED (3) starts flashing repeatedly to indicate that the access module has not been enrolled into the system.
 - Go to the F-Link software, select the required position in the **Devices** window and launch the enrollment mode by clicking on the Enroll button.
 - Press the tamper contact (5) on the back side of the module - the keypad is thus enrolled and the yellow LED indicator goes off.
- Close the cover of the module using the screw (6).

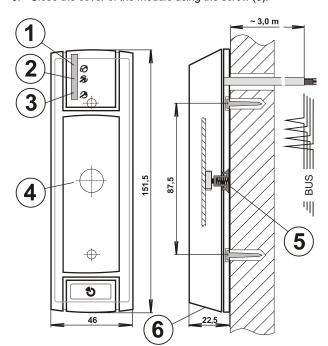


Fig: 1 - red LED indicates an armed (set) section, 2 - green LED indicates a disarmed (unset) section, 3 – yellow LED indicates fault/service mode, 4 - reading area, 5 - tamper contact; 6 - screw for holding the plastic cover



JABLOTRON ALARMS a.s. hereby declares that the JA-122E is in a compliance with the relevant Union harmonisation legislation: Directives No: 2014/53/EU, 2014/35/EU, 2014/30/EU, 2011/65/EU. original of the conformity asse at www.jablotron.com - Section Downloads.



Note: Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please return the product to the dealer or contact your local authority for further details of your nearest designated collection point.



